

P18000 400V 50HZ #AVR #MRS



Main Features

Frequency	Hz	50
Voltage	V	400/230
Power factor	cos ϕ	0.8
Phase		3

Power Rating

Emergency Standby Power ESP	kVA	18.49
Emergency Standby Power ESP	kW	14.79
Prime power PRP	kVA	18.16
Prime power PRP	kW	14.53
Continuous power COP	kVA	16.19
Continuous power COP	kW	12.95

Ratings definition (According to standard ISO8528 1:2005)

Engine specifications

Engine Brand	Yanmar	
Model	3TNV80-FPGE	
[50Hz] Exhaust emission level	Stage V	
Engine cooling system	Water	
Displacement	cm ³	1267
Aspiration	Natural	
Operating Speed-Nominal	rpm	3000
Speed governor	Mechanical	
Fuel	Diesel	
Oil capacity	l	4.4
Coolant capacity	l	0.9
Starting system	Electric	
Electric circuit	V	12



Alternator Specifications

Type	Brushes	
Class	H	
IP protection	23	
Poles	2	
Frequency	Hz	50
Voltage tolerance	%	1.5
Voltage regulation system	AVR	
Standard AVR	AVR 960D	



Dimensional data

Length	(L) mm	1500
Width	(W) mm	754
Height	(H) mm	1032
Dry weight	kg	475
Fuel tank capacity	l	51

Autonomy

Fuel consumption at 75% of Load	l/h	4.61
Fuel consumption at 100% of Load	l/h	5.99
Running time at 75% of load	h	11.06
Running time at 100% of load	h	8.51




Noise level

Guaranteed noise level (LWA)	dB(A)	96
Noise pressure level @ 7 m	dB(A)	67



STEEL SUPPORTING FRAME:

- Sturdy Supporting Frame for moto-alternator and canopy.
- Anti-vibration mounting properly sized.

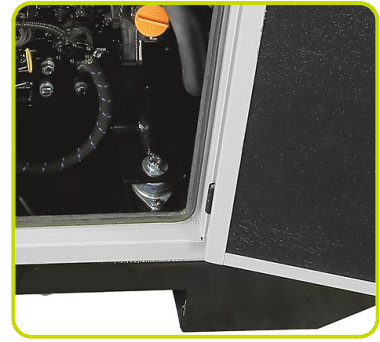

FULLY BUNDED BASEFRAME:

- Base forcable by forklift.
- Welder base with drainage point
- Big fuel integrated tank for an increased autonomy.
- Fuel level sensor.
- Fuel refiling point external for simple and rapid refueling operations (cap with key available as an accessory)




EASY AND FAST MAINTENANCE SERVICE:

- Designed to access all components by opening the roof (opening and closing with safety key).
- Side door for engine service and maintenance (opening with locking system from inside the compartment)
- Oil draining pipe with cap.



ENGINE COMPLETE WITH:

- Battery
- Liquids (No Fuel)
- Water temperature sensor
- Lube oil pressure sensor

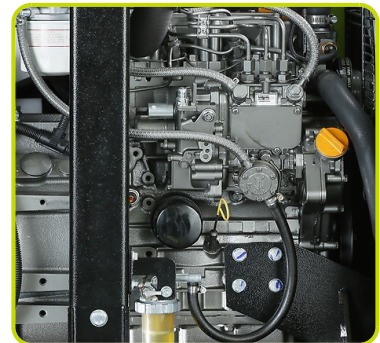


CANOPY:

- Modular type canopy designed for easy access to all components using only one side
- Weatherproof enclosure made of galvanized sheet metal.
- Noise attenuation thanks to high quality soundproofing material.
- Efficient residential silencer placed inside the canopy
- Single lifting points for easy Handling.



GENSET CONTROL:

- User friendly manual/remote start panel.
- Complete genset control and protection.
- Prepared for remote control
- Protection cover in plexiglass for controller

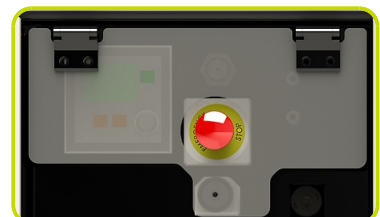

GENSET CONTROL PANELS

Mounted on the genset, complete with digital control unit or monitoring, control and protection of the generating set.

CONTROL SECTION

- CONTROL UNIT with Key 3 positions: OFF, ON local start, REM remote start.
- 2-wire remote start/stop (REM)
- CONNector for RSS / AMF panel (accessories available).
- Horn Alarm

CONTROL UNIT

- Display: LCD with icons (52x35mm)
- Genset parameters: V- Hz – RPM – A (1Phase) – kVA – kWe – Fuel level (%)
- Parameters control and/or firmware transferring through NFC smart connect

PROTECTIONS

- Circuit breaker.
- Genset Protection: Over load – current – voltage, High Coolant temperature, Low Oil pressure – Low fuel level.
- Emergency push button.

SOCKET TYPE

SCHUKO 230V 16A IP68	1
2P+T CEE 230V 16A IP67	1
3P+N+T CEE 400V 16A IP67	1
3P+N+T CEE 400V 32A IP67	1



SUPPLEMENTS CONTROL (Available when ordered)

PHS– Coolant pre-heating system

The coolant preheating system allow to mainain the engine at a temperature that ensures a quick start when required. Immersion heater 400W.




DPP – Differential Protection

Differential protection is device used to protect installations against indirect contact (not compatible with IPP).



IPP - Isometer Protection

Isometer Protection monitors the ungrounded system between an active phase conductor and earth (not compatible with DPP).

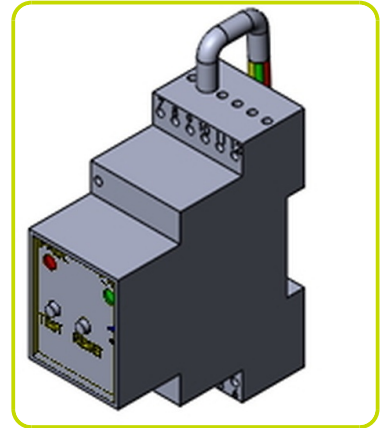

ACCESSORIES CONTROL PANEL

AMF - AUTOMATIC CONTROL PANEL

This accessory permits to control all the functions about a generator. It's built to monitor mono phase or three phase with neutral systems in alternate current; it permits to transfer the user's load on generator when the mains voltage is faulty. Conversely, as soon as AMF system detects the power grid, it stops the generator.

Equipment:

- Control and protection unit (DGT)
- Phase detector
- Contactor with interblock
- Battery charged
- Acoustic alarm
- 8 meters control wiring (with CONNector)
- External start stop capability
- Emergency stop button

Instrumentation (DGT):

- Mains voltage
- Genset voltage
- Frequency meter
- Hour meter

Alarm & Shutdowns:

- Generators voltage out of limits
- Battery Voltage out of limits
- Low oil Pressure
- Fail to start
- External shutdown



RSS - REMOTE START / STOP

RSS Remote start/stop wireless with CONNector (max Distance 90m)



ACCESSORIES

FCK - Fuel cap with key



STR - Site Trailer

